


# Ball Probe Moisture Meter

With Bluetooth<sup>®</sup>

**Model MR59**

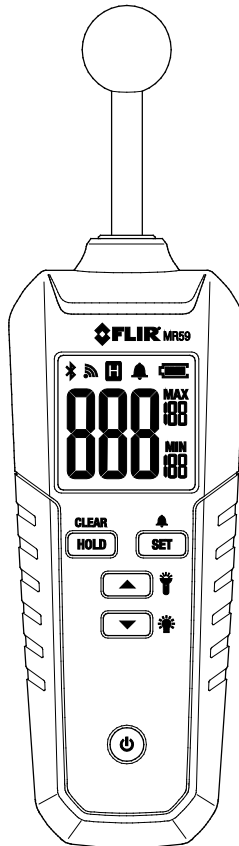

# Table of Contents

---

<b>1. Advisories</b>	<b>3</b>
<b>2. Introduction</b>	<b>4</b>
2.1 Key Features	4
<b>3. Description</b>	<b>5</b>
3.1 Meter Description	5
3.2 Display Description	5
3.3 Button Description	6
<b>4. Operation</b>	<b>7</b>
4.1 Meter Power, APO, and Zero Calibration	7
4.2 Moisture Measurements	7
4.3 Maximum and Minimum Readings	7
4.4 Data Hold	7
4.5 Display Backlight	7
4.6 Worklight	7
4.7 High Moisture Audible Alarm	8
4.8 Bluetooth Transmission Basics	8
<b>5. Bluetooth Technical Details</b>	<b>9</b>
<b>6. Maintenance</b>	<b>10</b>
6.1 Cleaning	10
6.2 Battery Installation and Replacement	10
<b>7. Safety</b>	<b>11</b>
7.1 FCC Compliance	11
<b>8. Specifications</b>	<b>12</b>
<b>9. Customer Support</b>	<b>13</b>
<b>10. Three-Year Limited Warranty</b>	<b>13</b>

# 1. Advisories

---

## 1.1 Copyright

© 2021, FLIR Systems, Inc. All rights reserved worldwide. No parts of the software including source code may be reproduced, transmitted, transcribed or translated into any language or computer language in any form or by any means, electronic, magnetic, optical, manual or otherwise, without the prior written permission of FLIR Systems.

The documentation must not, in whole or part, be copied, photocopied, reproduced, translated or transmitted to any electronic medium or machine-readable form without prior consent, in writing, from FLIR Systems.

Names and marks appearing on the products herein are either registered trademarks or trademarks of FLIR Systems and/or its subsidiaries. All other trademarks, trade names or company names referenced herein are used for identification only and are the property of their respective owners.

## 1.2 Quality Assurance

The Quality Management System under which these products are developed and manufactured has been certified in accordance with the ISO 9001 standard.

FLIR Systems is committed to a policy of continuous development; therefore, we reserve the right to make changes and improvements on any of the products without prior notice.

## 1.3 Documentation

To access the latest manuals and notifications, go to the 'Downloads' tab at:

<https://support.flir.com>. It only takes a few minutes to register online. In the download area you will also find the latest releases of manuals for our other products, as well as manuals for our historical and obsolete products.

## 1.4 Disposal of Electronic Waste



As with most electronic products, this equipment must be disposed of in an environmentally friendly way, and in accordance with existing regulations for electronic waste.

Please contact your FLIR Systems representative for more details.

## **2. Introduction**

---

Thank you for selecting the FLIR MR59 Ball Probe Moisture Meter with Bluetooth. This instrument detects moisture in wood and other building materials and transmits readings to a remotely paired smart device. This device is shipped fully tested and calibrated and, with proper use, will provide years of reliable service.


### **2.1 Key Features**

- Non-invasive pinless moisture measurements for wood and other building materials including plywood, drywall, oriented strand board (OSB), brick, cement screed, concrete, cement mortar, anhydrite screed, lime mortar, and plaster
- Bluetooth data transmission
- Maximum/Minimum readings
- High moisture Alarm audible alert
- LED Worklight
- Backlit LCD
- Data Hold
- Battery powered (9V battery)
- Automatic Power OFF after 30 minutes

## 3. Description


### 3.1 Meter Description

1. Moisture sensor (capacitance type)
2. Backlit LCD
3. Data Hold / MIN-MAX clear button
4. Worklight ON/OFF and up arrow button
5. Backlight ON/OFF and down arrow button
6. Power button
7. Alarm enable/Alarm threshold button
8. Worklight
9. Tripod mount
10. Battery compartment

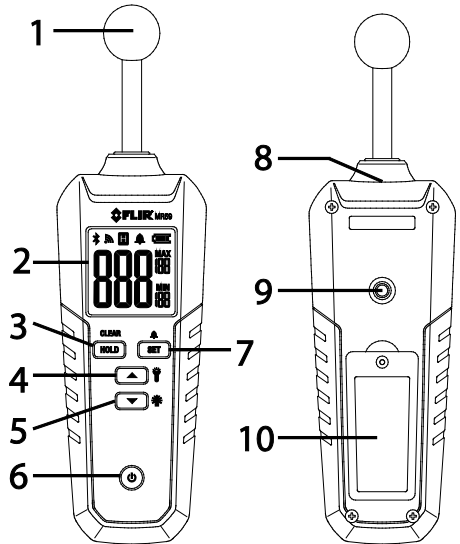





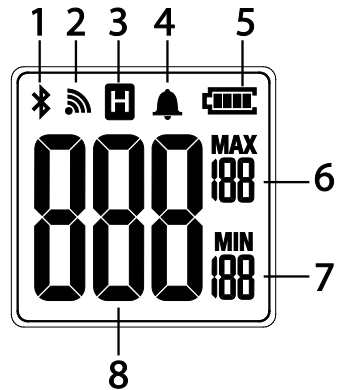

### 3.2 Display Description

1. Bluetooth (BLE) icon (when paired)
2. Transmission icon (flashes when paired)
3. Data Hold icon
4. Alarm enabled icon
5. Battery status icon
6. Maximum reading
7. Minimum reading
8. Moisture reading




### 3.3 Button Description

	Long press to power the meter ON/OFF
<b>CLEAR</b>	Long press to clear the MIN/MAX reading memories
<b>HOLD</b>	Short press to enable/disable Data Hold mode
	Long press to enable/disable the audible Alarm
<b>SET</b>	Short press to access the alarm threshold (limit) screen
	In the Alarm limit mode, increase the moisture alarm threshold
	In the Alarm limit mode, decrease the moisture alarm threshold
	Long press to switch Worklight ON/OFF
	Long press to the switch display backlight ON/OFF

## 4. Operation

---

### 4.1 Meter Power, APO, and Zero Calibration

1. One (1) 9V battery (rear compartment) powers the meter.
2. Long press the power button  to switch the meter ON/OFF. If the meter display does not switch ON, please check the battery.
3. The meter beeps and flashes **CAL** while it performs a self-test (zero calibration). Keep hands and objects away from the sensor while the meter powers up for optimum calibration accuracy.
4. The meter's APO feature automatically switches the meter OFF after 30 minutes of inactivity.

### 4.2 Moisture Measurements

1. Power the meter, keeping hands and objects away from the ball sensor.
2. Place the sensor against the surface of the material under test. The sensitivity of the sensor is uniform across its entire surface, so you can easily move the sensor in a variety of orientations to make it easier for you to reach and position during tests.
3. View the moisture reading on the LCD. Take a number of readings in a variety of locations for the best representation of the moisture present. Compare readings between a known dry area and an area where you suspect to find moisture.
4. The measurement range is 0 to 100 (relative readings).


### 4.3 Maximum and Minimum Readings

In addition to the real-time moisture reading display, the meter shows the highest (MAX) and lowest (MIN) readings for a measurement session. Long press the **CLEAR** button to reset the MIN/MAX reading memories.


### 4.4 Data Hold

Short press the **HOLD** button to freeze/unfreeze the displayed reading. The 'H' icon appears when the data hold mode is active.



### 4.5 Display Backlight

Long press the backlight button  to switch the LCD backlight ON/OFF. Overuse of the backlight will shorten battery life considerably.

### 4.6 Worklight



Long press the Worklight button  to switch the light ON/OFF. To conserve battery life, use the light only as needed.

## 4.7 High Moisture Audible Alarm

The MR59 beeps when the moisture reading exceeds the high alarm limit. To set the alarm limit, short press the  **SET** button and use the arrow buttons to set the value. To exit the alarm programming screen, short press the SET button again. To enable/disable the audible alarm, long press the  **SET** button. When the alarm is enabled (default), the alarm bell icon appears. The alarm limit is set to '20' by default.

## 4.8 Bluetooth Transmission Basics

To connect to a remote device running **FLIR Tools™**, turn on the remote device and start the **FLIR Tools** application. Open **Instruments**, and search for the MR59 (the MR59 must be ON). Tap to connect to the MR59.



When connected to a remote device, the MR59 displays the Bluetooth  and the transmission  icons and automatically transmits moisture data.

When you switch the meter ON, the Bluetooth and transmission icons will be OFF. They appear only when you pair the MR59 with a remote device.

## 5. Bluetooth Technical Details

---

When connected to a device running the **FLIR Tools™** mobile app, the MR59 (using the **METERLiNK®** protocol) continually sends readings for live display on the remote device. When connected to a compatible FLIR camera that supports **BLE** (Bluetooth Low Energy), the MR59 continually sends meter readings for live display on the camera screen. Download the **FLIR Tools** mobile app from the Google Play™ store, the Apple App store, or here: <https://www.flir.com/products/flir-tools-app/>

1. When successful communication between the meter and a remote device or FLIR camera is established, the Bluetooth icon  and the transmission icon  appear on the meter display.
2. Refer to the **FLIR Tools** help utility (in the mobile app) for detailed information and tutorials regarding the **FLIR Tools** application.
3. Refer to Section 4.8 *Bluetooth Transmission Basics* for using the meter to transmit data via Bluetooth.

## **6. Maintenance**

---

### **6.1 Cleaning**

- Wipe meter and sensor with a water-dampened cloth as needed. Do not use solvents or abrasives.
- Always keep the instrument dry.
- Prevent dirt from accumulating on the sensor.

### **6.2 Battery Installation and Replacement**

If the instrument does not switch ON or if the battery status icon indicates a low battery voltage, please replace the battery:

1. Remove the Phillips head screw at the rear of the instrument and remove the battery compartment cover.
2. Install or replace the 9V battery observing correct polarity.
3. Secure the battery compartment before operating the meter.

## 7. Safety

---

- Handle the meter carefully and do not subject the sensor to shock or excessive vibration.
- Keep the instrument dry.
- Pack the battery separately when the meter is to be stored for periods longer than 60 days.
- Do not use this device for purposes other than those described in this manual.

### 7.1 FCC Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

#### **WARNING**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## 8. Specifications

---

Measurement range	Moisture, 0 to 100
Measurement accuracy	Relative measurements only
Measurement type	Capacitance ball sensor (non-invasive)
Measurement detection depth	Sensing depth for most common building materials up to 4.0 in (100 mm), this may vary depending upon material under test.
Response time	0.5 seconds
Display	Backlit, multifunction LCD
Worklight	High intensity white LED
Auto Power OFF (APO)	After 30 minutes
Power supply	9V battery (rear compartment)
Low battery indicator	 (100% to empty)
Operating RH/Temperature	90%, 32 to 86°F (0 to 30°C) 75%, 86 to 104°F (30 to 40°C) 45%, 104 to 122°F (40 to 50°C)
Housing material	Impact resistant plastic
Drop-proof	6.6 ft (2 m)
IP rating	IP40
Safety Compliance	CE, RCM
Dimensions	9.5 x 2.6 x 1.5 in (240.5 x 67 x 38mm)
Weight	8.6 oz (245 g)

## **9. Customer Support**

---

Customer Support Telephone List:

<https://support.flir.com/contact>

Repair, Calibration, and Technical Support:

<https://support.flir.com>

## **10. Three-Year Limited Warranty**

---

This product is protected by FLIR's 3-Year Limited Warranty.

Visit: [www.flir.com/testwarranty](http://www.flir.com/testwarranty) to read the 3-Year Limited Warranty document.



## Customer Support

Customer Support Telephone List:

<https://support.flir.com/contact>

Repair, Calibration, and Technical Support:

<https://support.flir.com>

Publication Identification No.:	MR59-en-US
Release Version:	AC
Release Date:	November 2021
Language:	en-US