

USB Coaxial Switch

This document provides security information
for the following instruments:

U1816A

U1816C

U1816E

U1816F

Security
Features and
Document of
Volatility

Notices

© Keysight Technologies, Inc.
2021

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Keysight Technologies, Inc. as governed by United States and international copyright laws. The information found in this manual is subject to change without notice.

Document Part Number

5992-4525EN

Print Date

July 2021

Published in USA

Keysight Technologies Inc.
1400 Fountaingrove Parkway
Santa Rosa, CA 95403

Table of Contents

Contacting Keysight Sales and Service Offices 4

Products Covered by this Document 5

Instrument Memory 6

Contacting Keysight Sales and Service Offices

Assistance with test and measurement needs, and information on finding a local Keysight office, is available on the Internet at:

<http://www.keysight.com/find/assist>

If you do not have access to the Internet, please contact your field engineer.

NOTE

In any correspondence or telephone conversation, refer to the instrument by its model number and full serial number. With this information, the Keysight representative can determine whether your unit is still within its warranty period.

Products Covered by this Document

Product Family Name	Product Names	Model Numbers
USB Coaxial Switch	USB Coaxial Switch	U1816A, U1816C, U1816E, U1816F

This document describes instrument security features and the steps to declassify an instrument through memory clearing, sanitization or removal.

For additional information, go to:

<http://www.keysight.com/find/security>

NOTE

Be sure that all information stored by the user in the instrument that needs to be saved is properly backed up before attempting to clear any of the instrument memory. Keysight Technologies cannot be held responsible for any lost files or data resulting from the clearing of memory. Be sure to read this document entirely before proceeding with any file deletion or memory clearing.

Instrument Memory

This section contains information on the types of memory available in your instrument. It explains the size of memory, how it is used, its location, volatility, and the sanitization procedure.

Memory Type: Flash		Memory Size: 128kBytes
Memory Function: Model number, Serial number and Firmware storage		
User Modifiable (Y/N): N	Removable (Y/N): N	Volatile (Y/N): N
Memory Erase Processes: Not applicable		

Memory Type: EEPROM		Memory Size: 8kBytes
Memory Function: Switch cycles tracking		
User Modifiable (Y/N): Y	Removable (Y/N): N	Volatile (Y/N): N
Memory Erase Processes: Using command "SYST:MCLCALL"		